

Autolearn with SmartPilot-X



WARNING: Clear water

When using Autolearn you must have significant clear water both in front and to the sides of the vessel. This is needed to accommodate a series of maneuvers, which include sudden, sharp turns.



WARNING: Vessel safety

Press the Standby button to return to manual steering at any time during an AutoLearn routine. NEVER compromise vessel safety.



Clear water

The Autolearn set up feature performs a series of 7 or 8 turns at normal cruising speed. The amount of clear water required depends upon the cruising speed of your vessel.

For example:

- Minimum 100 m wide and 500 m ahead (typical non-planing vessel at 6 kts).
- Minimum 500 m wide and 2000 m ahead (typical planing vessel at 20 kts).

Typical clear water requirements

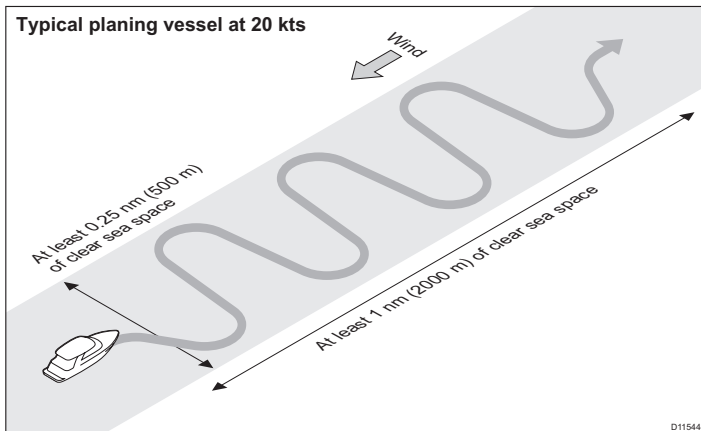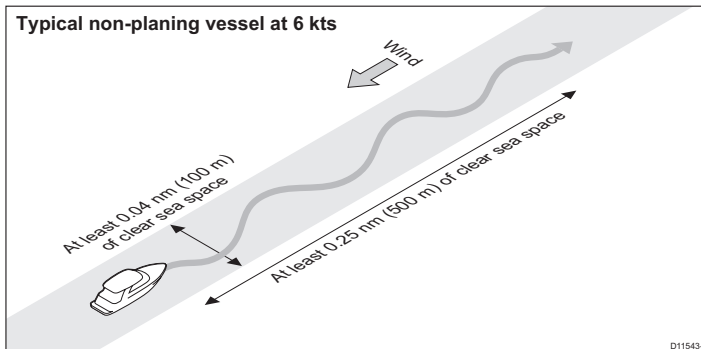

See also

For further instructions refer to the commissioning instructions supplied with your autopilot controller.